

Safety Warning




- The installation should be carried out by a qualified electrician in compliance with the current edition of the IEE Wiring Regulations.
- Prior to installation, carry out the necessary risk assessment considering the people who could be at risk, the level of risk and the precautions required to control the risk
- Ensure that the circuit supply is isolated either by the circuit supply fuse being removed or the applicable circuit breaker being turned off before installation or any maintenance.
- Check the total load on the circuit ensuring the luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
- Long-term use and voltage fluctuations can reduce the life span of the fitting.
- If the fitting incorporates control gear, ensure careful sizing to avoid instances of nuisance tripping of the protective device used in the installation.
- Follow the provided installation instructions, using the fixings supplied or recommended.
- Keep out of reach of children.



Specification

Box Contents -
 4 x Apollo Bulkhead
 4 x Bag of Fixings

| | |
|-----------------------------|-------------------------------|
| Dimensions: | Ø: 325 x D: 75mm |
| Material: | Polycarbonate body & diffuser |
| Working Temperature: | Standard: -20°C - 45°C |
| Included: | Bag of fixings |

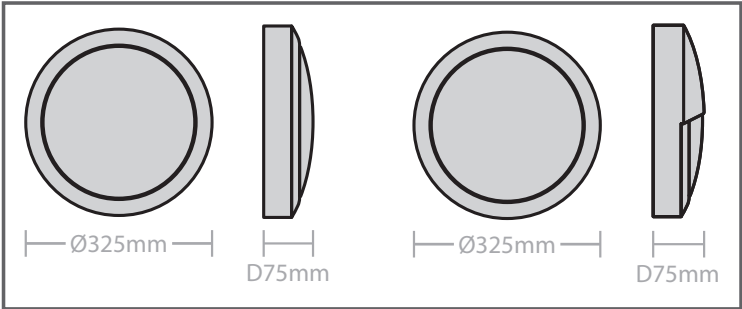



MAXIMUM FITTINGS PER CIRCUIT

| Automatic Circuit Breaker Type: | B6 | B10 | B13 | B16 | B20 | C10 | C13 | C16 | C20 |
|---------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Rated Current: | 6A | 10A | 13A | 16A | 20A | 10A | 13A | 16A | 20A |
| Cable (mm): | 1.5 | 1.5 | 1.5 | 2.5 | 2.5 | 1.5 | 1.5 | 2.5 | 2.5 |
| APOL16W/4PK-CCT | 4 | 7 | 9 | 12 | 14 | 12 | 15 | 20 | 23 |

Installation Instructions



Note: This is a Class II Luminaire - No Earth required

1. Isolate the mains supply before commencing with the installation.
2. Remove the bezel by gently pulling away from the body. Twist the diffuser 45° anti-clockwise to unlatch, then pull away.
3. Gently push the latch (as shown below) to open the hinged gear tray and open as shown.

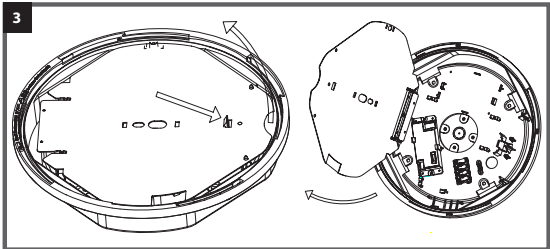
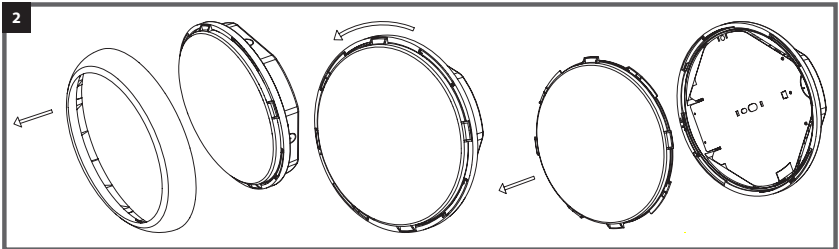


4. Select the most suitable cable entry point from either 4x Side or 2x Rear Access Points and drill the hole to suit. These holes are compatible with BESA box, Conduit or standard cable entry.
For outdoor use it is recommended a suitable IP rated cable gland is used (Not supplied).
5. A. Feed the mains cable through the grommet / gland fitted in previous steps.
B. Hold the fitting up to the ceiling / wall in the desired position and mark hole fixing centres.
C. Drill fixing holes.
D. Insert rawl plugs.
E. Fix in position with fixings supplied.
6. Ensure the luminaire has a switched live supply to "Ls" (switched live). Route the mains supply cable to the terminal block on the gear tray and terminate, ensuring correct polarity is observed. Ensure all conductors are fully sleeved and insulated.


Note: If converting to Emergency with the EM Kit (Supplied separate) the luminaire will require a secondary unswitched live supply "L" as well as a switched supply. The unswitched supply "L" must be taken from the same phase as the "switched" supply and must be wired to the same MCB so that upon test, it is isolated at the same time as the switched supply.

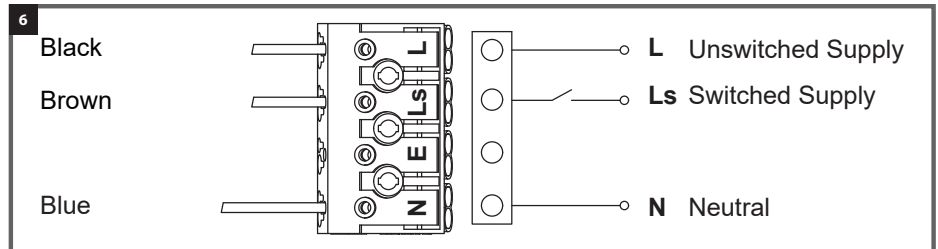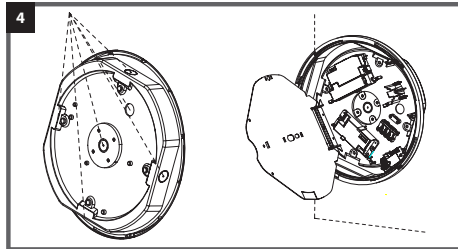

7. Select the desired wattage using the switch located on the driver.
8. If using the emergency or microwave sensor plug and play kits (supplied separate) it is suggest to install these onto the base at this point. (Instructions are provided with the kits)
9. Close the geartray ensuring that no cables will become trapped, and engage the latch the secure the geartray in a closed position.
10. Set the specified colour temperature using the switch located on the front of the LED Board.

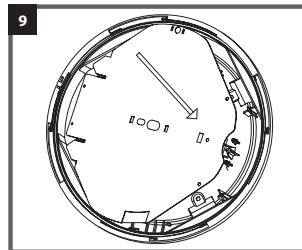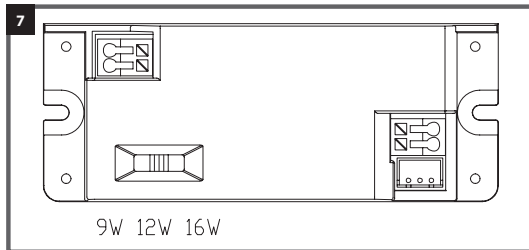

11. Refit the diffuser by locating into the base and rotating 45 degrees clockwise until the diffuser has engaged. Then insert the screw provided to lock the diffuser into position. Followed by clicking the bezel into position. It is recommended that if you have used side conduit entry that the diffuser is trimmed to ensure neat fit over the conduit. The bezels include cutout locations for this. See below. Restore the mains power supply, switch on and test for satisfactory operation.

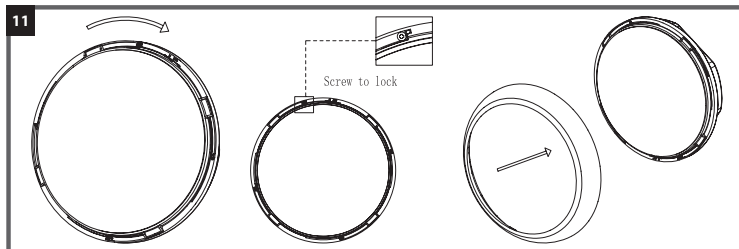


Warranty

This product is guaranteed for a period of 5 years from the date of purchase. The warranty is invalid in the case of improper use, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations (BS7671). The warranty is also invalidated if the luminaire has been insulation tested. Should this product fail during the warranty period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.

Maintenance

- This fitting will require routine cleaning if used in adverse (dust, paint, welding, oils etc) environments. Do not use solvents, aggressive detergents or abrasives.
- The light source & driver in this luminaire can be quickly and easily replaced at end of life. This should be carried out by a competent person. Contact Red Arrow for details of replacements.

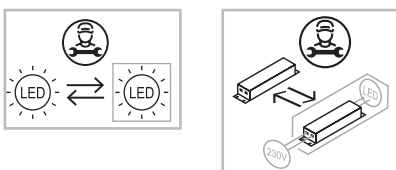

- When this fitting comes to the end of it's life or you choose to replace it, please do not dispose of it with your normal waste. Please recycle where the facilities exist, check with your local authority for suitable options.

INS/BLK/0009/APOLLO/V1