



Evacuator Synergy + V3 Testing & Maintenance

We recommend the following test & maintenance guidelines for V3 programmed systems. If you are unsure if your system is setup via V3 mode contact our technical support team

Weekly Maintenance

We advise a weekly visual check be carried out on all Call Points, Auto Detectors, Relays and any other devices within your system. Checking for any damaged or unplugged devices. Checks should be carried out by a competent person within your organisation

Annual Maintenance

Annual checks will comprise of the weekly check plus an inspection and test of 25% of the connected devices on the Base Station using the Test facility on the V3 Base (details below). Any low batteries should be replaced or any devices not connected to the Base Station investigated. Annual Maintenance must be carried out by a maintenance/installation company/individual that is approved by Evacuator Alarms.

System Test

We recommend completing a full alarm test on a minimum of Four weekly intervals inspecting each alarm in the process. Test more frequently should your risk assessment specify. Test should be carried out by a competent person or Fire Marshall within your organisation

All testing and maintenance should be recorded and documented in your Fire Log book. Any concerns should be investigated

V3 Test Facility (6767)

To access the Test facility first press button A on the V3 Base Station. Press "*Enter code for more options*" in the bottom left corner of the screen. Enter code 6767.

You will be greeted with the below screen. This is where you enter the number of the unit you wish to test

A screenshot of a digital interface for testing. At the top, it says "Number to test or locate:" followed by a red "0" and "001". Below this is a 3x3 grid of buttons. The top row has three blue circular buttons with white upward arrows. The middle row has three square buttons with a white outline of a mobile phone. The bottom row has three blue circular buttons with white downward arrows. To the right of the grid are three light blue rectangular buttons labeled "Locate", "Test", and "EXIT" in black capital letters.

EVACUATOR

Site Alarms

Once you have entered the number of the device you wish to test, all three LED's will illuminate on the device. This device is now isolated from the system and free to test.

- Call Points will chirp on activation, this will not pass on an alarm signal to any devices. Remember only to activate the device you wish to test. This can be identified by all three LED's being illuminated
- Detectors will need to be tested with a can of smoke or a heat pole. Once activated the Blue LED will go out on the device indicating the test has been successful. Remember only to activate the device you wish to test. This can be identified by all three LED's being illuminated. Once test is complete clean the detector head using a compressed air can.

Devices that have been tested will need to be reset using buttons A&B, call points will also need to be reset using the call point reset key. This is essential for normal operation of the system

