

4.3 REMOVAL AND PLACING OF THE WASTE BAG

Stop the vacuum motors by pressing the relevant STOP buttons.



Warning!
Disconnect the plug from the power socket.

- Use two clamps to fasten the collection bag at two points (about 3 – 5 cm from each other), just below the filter chamber.
- Cut off the bag in the position between the two clamps.
- Remove the lower part of the bag.



- Pull down a length of new bag from the chamber, until it reaches the bottom support plate



Attention!
Used bags should be disposed of into a special waste disposal container, in accordance with laws applicable in the country where the vacuum cleaner is used.