MK III ASSEMBLY AND USER GUIDE





TO BE CARRIED OUT AT LEAST ONCE A WEEK PODIUM SAFETY CHECKLIST

CHECKLIST DESCRIPTION DATE	CHECKED BY
CHECK CASTORS ARE FIRMLY FIXED AND LOCKING MECHANISMS ARE FUNCTIONING CORRECTLY, IF NOT, ADJUST TO SUIT.	
CHECK STEP HOOK MECHANISMS ARE LOCKING CORRECTLY	
DECKING SHOULD BE CHECKED FOR DAMAGE AND FREE OF ANY MATERIAL LIKELY TO CAUSE SLIPPING ie OIL etc.	
CHECK PIVOT BOLTS ARE SECURE AND ALLOW FREE MOVEMENT	
TEST CENTRE LOCKING MECHANISMS ARE FUNCTIONING CORRECTLY	
TEST GATE FOR MOVEMENT AND LOCKING ON VERTICAL ABOVE PIN	
CHECK ALL WELDS FOR CRACKS AND TUBE DAMAGE	
CHECK ALL LABELS ARE FIXED AND READABLE.	
CHECK THAT ERECTED STEPS ARE USED ON A LEVEL SURFACE.	
CHECK THAT PLATFORM IS NOT PLACED ON HIGHEST RUNG.	
CHECK STABILISERS ARE IN WORKING ORDER	



- 1) OPEN STEPS UNTIL FOLDING FRAME (A) MECHANISMS LOCK AUTOMATICALLY AT (B).
- 2) IF TOOL BOX BEING USED FIT NOW ON APPROPRIATE RUNG.

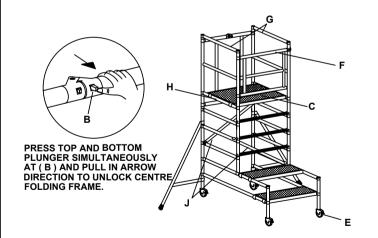

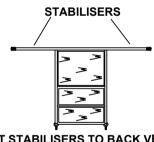

FIT STABILISERS TO BACK VERTICALS IN LINE WITH FOLDING BACK FRAME.

- 6) LOWER STABILISERS TO FLOOR AND CLAMP ON TO VERTICAL.
- 7) FIT WORK PLATFORM (C) AT REQUIRED RUNG HEIGHT.
- 8) RUNG (H) IS THE HIGHEST RUNG LEVEL AT WHICH ANY PLATFORM SHOULD BE USED, NEVER USE PLATFORMS OR STAND AT RUNG (G) OR LEVEL (K)

- 3) FIT SMALL PLATFORMS (D) TO FORM STEPS UP TO THE TOP PLATFORM. ENSURE THE LOCKING MECHANISMS OF THE HOOKS ARE FITTED CORRECTLY, ALSO FIT THE CLIMBING RUNG STEPS AS SHOWN.
- 4) FIT DIAGONAL BRACES (J) AS SHOWN. PUSH UNIT INTO POSITION WITH FOLDING FRAME (A) FACING WORK. REST ON A FIRM AND LEVEL BASE, AT THIS POINT FIT STABILISERS TO VERTICALS AS SHOWN.
- 5) BEWARE OF ANY OVERHEAD HAZARDS NEAR WHERE YOU ARE GOING TO WORK.

ADDITIONAL USER NOTES

- a) BEFORE STANDING ON DECK LOCK ALL CASTORS (E). AND FIT STABILISERS.
- **b) WHEN STANDING ON WORK PLATFORM SWING GUARDRAIL** GATE (F) INTO POSITION AND LOCK BEHIND YOU.
- c) TO MOVE UNIT UNLOCK GATE. DISMOUNT AND RAISE STABILISERS 12 MM OFF THE FLOOR. UNLOCK CASTORS AND PUSH INTO PLACE. REPEAT PROCEDURES a) & b).
- d) SAFE WORKING LOAD ON WORK PLATFORM 150Kg OR ONE MAN PLUS HAND TOOLS.
- e) DO NOT OVER REACH WHEN WORKING ON PLATFORM. AND LIMIT HORIZONTAL FORCE TO 10Kg (22 lb) WORK ONLY AT A COMFORTABLE ARMS LENGTH.
- f) DO NOT, UNDER ANY CIRCUMSTANCES, MOVE UNIT WITH ANYONE ON IT.
- **a**) NEVER PUT ANYTHING ON THE PLATFORMS TO GAIN EXTRA HEIGHT, STAND ON THE WORK PLATFORM ONLY.
- h) NEVER USE DAMAGED OR INCOMPATIBLE EQUIPMENT.
- i) IF IN DOUBT ABOUT ANY APPLICATION DO NOT GUESS **CONSULT YOUR SUPPLIER.**

SITEBOX - MKIIICPIASSY 13.10.05 (ISSUE 2)

To unlock castors press lever Z