



80W GLUE GUN - 230V

MODEL NO: **AK2920**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear protective gloves



Hot surfaces

1. SAFETY

1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey Stockist.

If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.


- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.

- * **DO NOT** pull or carry the appliance by the power cable.
- * **DO NOT** pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
- * **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.

If the cable or plug is damaged during use, switch the electricity supply and remove from use.

Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.

Class II products are wired with live (brown) and neutral (blue) only, and are marked with the  Class II symbol;

A) Connect the BROWN live wire to the live terminal 'L'.

B) Connect the BLUE neutral wire to the neutral terminal 'N'.


C) After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.

Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.

- * **DO NOT** connect either wire to the earth terminal.
Sealey recommend that repairs are carried out by a qualified electrician.

1.2 GENERAL SAFETY

- ✓ Familiarise yourself with this products application and limitations, as well as the specific potential hazards peculiar to the glue gun.
- WARNING!** Disconnect the glue gun from the mains power before changing accessories, servicing or performing any maintenance.
- ✓ Maintain the glue gun in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. *Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- WARNING!** Always wear approved eye or face protection when operating the glue gun.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings, and other loose jewellery, and contain and/ or tie back long hair.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes,
- ✓ Secure non stable workpiece with a clamp, vice or other adequate holding device.
- * **DO NOT** use the glue gun for a task it was not designed to perform.
- * **DO NOT** operate the glue gun if any parts are damaged or missing as this may cause failure and/or possible personal injury.
- * **DO NOT** hold the workpiece by hand. Use clamps or a vice (not included) to secure the workpiece. Available from your Sealey stockist.
- * **DO NOT** let the glue gun get wet or use in damp or wet locations or areas where there is condensation.
- * **DO NOT** place nozzle close to your face (especially eyes, ears, etc) or other persons or animals.
- * **DO NOT** allow children or untrained persons to operate the glue gun.
- * **DO NOT** operate the glue gun when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- * **DO NOT** allow the glue to contact skin.
- * **DO NOT** inhale any vapour given off by the glue.
- * **DO NOT** carry the glue gun with your finger on the power switch, or carry by the power cable.
- * **DO NOT** use the glue gun where there are flammable liquids, solids or gases such as paint solvents, etc.
- * **DO NOT** leave the glue gun unattended whilst it is switched on.
- ✓ When not in use switch the glue gun off, remove plug from the power supply, store the tool in a safe, dry child proof area.

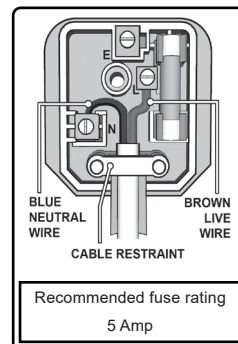

2. INTRODUCTION

Ready to use in less than 5 minutes. Composite housing incorporating folding stand. Once fully heated, mains cable can be unplugged from body for short periods of cordless use. On/off switch and trigger feed control. Suitable for Ø11 x 100mm glue sticks. Two glue sticks can be loaded at once.

3. SPECIFICATION

MODEL NO:..... **AK2920**

Consumable Parts: AK292/2 - All Purpose Glue Stick Pack of 25

Supply:..... 230V

4. OPERATION

NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they **DO NOT** play with the appliance.

- **WARNING!** Remember that whilst operating the gun, both the dispensing nozzle and the glue itself are hot. **DO NOT** allow the nozzle or glue to come into contact with any part of your body or that of anybody else who may be assisting.

4.1. PREPARATION

- 4.1.1. Ensure the work surface is clean and clear before engaging in the task in hand.
- 4.1.2. Steady the workpiece with an appropriate vice or clamp.
- 4.1.3. Clip the metal stand to the front of the glue gun.
- 4.1.4. The gun needs two sticks inserted to operate. Insert the glue sticks firmly into the inlet, squeeze the trigger several times to insert the sticks fully into the gun. Plug the glue gun into the mains and move the switch to the on position.

4.2. USING THE GLUE GUN

- 4.2.1. Leave the gun to warm up for approximately 5 minutes.
- 4.2.2. Squeeze the trigger firmly until glue flows from the nozzle.
- 4.2.3. When the task is complete, unplug the gun and leave to cool.
- 4.2.4. No cleaning is required. **DO NOT** attempt to remove the glue stick from the gun as this may cause damage to the product and/or personal injury.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

01284 703534

sales@sealey.co.uk

www.sealey.co.uk