



PROFESSIONAL GLUE GUN 450W 230V

MODEL NO: **AK2921.V3**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear protective gloves



Wear eye protection



Warning!
Hot surface

1. SAFETY

1.1. ELECTRICAL SAFETY

- ✓ Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- ✓ Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- ✗ **DO NOT** expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- ✗ **DO NOT** abuse the cord. Never use the cord for carrying, pulling, or unplugging the power tool. Keep cord away from the heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- ✓ When operating the tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- ✓ If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

1.2. GENERAL SAFETY

- ✓ Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- ✓ Keep children and bystanders away whilst operating the tool. Distractions can cause you to lose control.
- ✓ Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.
- ✗ **DO NOT** allow children to play with the tool.
- ✓ Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- ✓ The appliance shall be disconnected from its power source during service and when replacing parts
- ✓ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING!** This tool must be placed on its stand when not in use.
- ✓ A fire may result if the appliance is not used with care, therefore:
 - Be careful when using the appliance in places where there are combustible materials
 - Do not apply to the same place for a long time
 - Do not use in presence of an explosive atmosphere
 - Be aware that heat may be conducted to combustible materials that are out of sight
 - Place the appliance on its stand after use and allow it to cool down before storage
 - Do not leave the appliance unattended when it is switched on.
- ✗ **DO NOT** modify the tool in any way. Doing so invalidates the warranty and can cause serious safety hazards.
- ✓ Stay alert, watch what you are doing and use common sense when operating the tool.
- ✗ **DO NOT** use the tool whilst you are tired or under the influence of drugs, alcohol, or medication. A moment inattention whilst operating power tools may result in serious injury.
- ✓ Use personal protective equipment. Always wear eye protection.
- ✗ **DO NOT** overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ✓ Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away. Loose clothes, jewellery or long hair could into contact with the glue gun.
- ✗ **DO NOT** use the gun if the switch does not turn it on and off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- **WARNING!** In the event of an accident or breakdown, turn off the gun immediately and, if safe to do so, remove the plug from the socket. Store the gun in a dry, secure area until it can be assessed by a qualified technician.
- ✓ Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the gun.

1.3. GLUE GUN USE AND CARE

- ✗ **DO NOT** use the glue gun for a task it was not designed to perform.
- ✗ **DO NOT** operate the glue gun if any parts are damaged or missing as this may cause failure and/or possible personal injury.

- ✘ **DO NOT** hold the workpiece by hand. Use clamps or a vice (not included) to secure the workpiece.
- ✘ **DO NOT** place nozzle close to your face (especially eyes, ears, etc) or other persons or animals.
- ✘ **DO NOT** allow the glue to contact skin.
- ✘ **DO NOT** inhale any vapour given off by the glue.
- ✘ **DO NOT** carry the glue gun with your finger on the power switch, or carry by the power cable.
- ✘ **DO NOT** leave the glue gun unattended whilst it is switched on.
- ✓ When not in use switch the glue gun off, remove plug from the power supply, store the tool in a safe, dry child proof area.

2. INTRODUCTION

Ready to use in less than two minutes. Once fully heated, mains cable can be unplugged from body for short periods of cordless use. Composite housing with soft grip for added comfort. On/off switch and trigger feed control. Suitable for Ø11 x 100mm glue sticks. Two glue sticks can be loaded at once. Features magnets in handle base for adhering to metal stand when not in use.

3. SPECIFICATION

Model No	AK2921.V3	Weight	1.0kg
Power	450W	Power Supply Cable Length	1.5m
Supply	230V	Replacement Glue Sticks (25pc)	AK292/2

4. OPERATION


WARNING! Remember that whilst operating the gun, both the dispensing nozzle and the glue itself are hot. **DO NOT** allow the nozzle or glue to come into contact with any part of your body or that of anybody else who may be assisting.

4.1. PREPARATION

- 4.1.1. Ensure the work area is clean and clear before engaging in the task in hand.
- 4.1.2. Steady the workpiece with an appropriate vice or clamp.
- 4.1.3. Clip the metal stand to the front of the glue gun.
- 4.1.4. The gun needs two sticks inserted to operate. Insert the glue sticks firmly into the inlet, squeeze the trigger several times to insert the sticks fully into the gun. Plug the glue gun into the mains and move the switch to the on position (fig.1).

4.2. USING THE GLUE GUN

- 4.2.1. Leave the gun to warm up for approximately 5 minutes.
- 4.2.2. Squeeze the trigger firmly until glue flows from the nozzle.
- 4.2.3. Once fully heated, the mains cable can be unplugged from the body to allow short period of cordless use. When the gun starts to cool down it will be plugged back in.
- 4.2.4. When the task is complete, unplug the gun, place it on the stand and leave to cool.

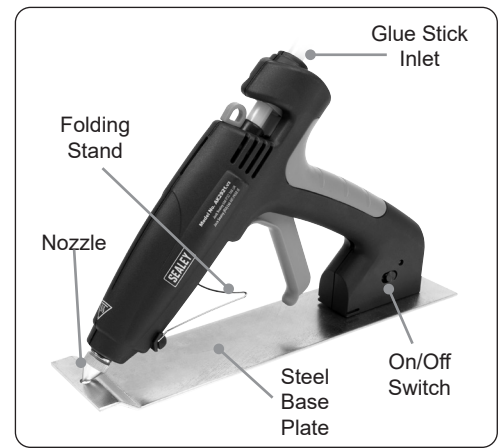

5. STORAGE & MAINTENANCE

- 5.1. When not in use, store the glue gun in a dry, secure location, out of reach of children.
- ✓ No cleaning is required.
- ✘ **DO NOT** attempt to remove the glue stick from the gun as this may cause damage to the product and/or personal injury.

6. END OF LIFE

- 6.1. At the end of its service life, this glue gun must be disposed of in an environmentally responsible manner. Components such as metal parts should be recycled wherever possible. **DO NOT** discard the appliance with general household or construction waste. Please follow all local environmental regulations to ensure safe and sustainable disposal.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group Farnley Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk