

# SHORT-ARM THREADED NUT RIVETER LONG-ARM THREADED NUT RIVETER MODEL NO: AK3984.V2 & AK3985.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



instructions

#### 1. SAFETY

- WARNING! Ensure Health & Safety, local authority and general workshop practice regulations are adhered to when using this equipment.
- Familiarise yourself with the application and the limitations of the riveter, as well as the potential hazards.
- ✓ Maintain the riveter in good condition (use an authorised service agent).
- Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- $\checkmark$  Keep the riveter clean for best and safest performance.
- $\checkmark$  Check moving parts alignment on a regular basis.
- DO NOT hold the workpiece by hand. Secure unstable workpiece with a clamp, vice or other adequate holding device.
- Ensure the workpiece is correctly secured before using the riveter.
- \* DO NOT use the riveter for any purpose other than that it was designed for.
- DO NOT operate the riveter if any parts are damaged or missing, as this may cause failure and/or personal injury.
- $\checkmark$  When not in use store in a safe, dry, childproof location.
- **WARNING!** Always wear approved eye or face protection when operating the riveter.

# 2. INTRODUCTION

#### 2.1. AK3984.V2

Suitable for rivet nuts in aluminium, steel and stainless steel. Short arms provide effortless functionality and access to restricted spaces.

#### 2.2. AK3985.V2

Suitable for rivet nuts in aluminium, steel and stainless steel. Long arms provide effortless functionality with adjustable stroke scale for improved accuracy.

## 3. SPECIFICATION

Length:	AK3984	410mm
	Yes	
M4 x 0.7	Yes	Yes
M5 x 0.8	Yes	Yes
M6 x 1	Yes	Yes
M8 x 1.25	Yes	Yes
M10 x 1.5	No	Yes
M12 x 1.75mm	No	Yes
Rivet Types:		
	Yes	
Steel	Yes	Yes
Stainless Steel	Yes	Yes
Structural	No	No


# 4. OPERATION

# 4.1. INSERTING RIVET NUTS

4.1.1. Adjust the working stroke by rotating the sheath anticlockwise to lengthen the working stroke and clockwise to shorten the working stroke.

**Note:** Model No: AK3985.V2 has a stroke scale to gauge optimum compression (see Fig.1). Only work when the scale indicates 6mm and below.

- 4.1.2. Retighten the knurled lock ring.
- 4.1.3. Screw a nut onto the mandrel, until it is level with the end of the nut.
- 4.1.4. Insert the riveter into the hole and close the handles to rivet the nut. The rivet needs to shorten by approximately 6mm.
- 4.1.5. Rotate the thumbwheel anticlockwise to remove the mandrel from the rivet nut.

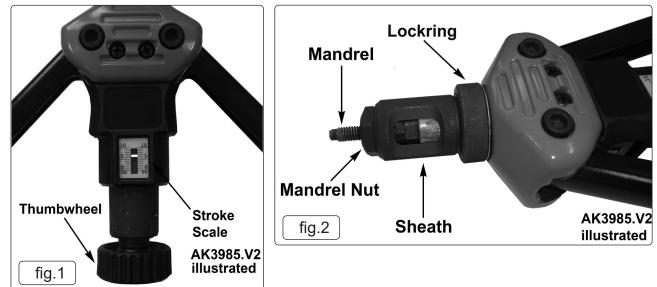

#### 4.2. CHANGING THE MANDREL (REFER TO FIG.2)

- 4.2.1. Use the tool to remove the mandrel nut, remove the sheath and its washer.
- 4.2.2. Place the spanner supplied over the mandrel and use it to hold down the tube to engage and hold the hex nut. Use another spanner to undo the mandrel (anticlockwise).
- 4.2.3. Screw in the new mandrel, refit the sheath, its washer and the mandrel nut, ensure they are all tight before use.

## 5. TROUBLESHOOTING

**5.1.** If the mandrel can not be easily removed from a rivet, **DO NOT** try to force it as it could cause damage to the riveter. Use a spanner to rotate the mandrel anticlockwise to release it from the rivet.



#### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR 01284 757500 01284 703534 R sales@sealey.co.uk realey.co.uk