


INSTRUCTIONS FOR:


## **RATCHET REPAIR KITS**

The Sealey Ratchet Repair Kit that has been supplied to you will be one of the following three types:




The head can be opened up to access the ratchet mechanism either by releasing the circlip using a pair of internal circlip pliers (fig.1) or removing the securing screws (figs. 2,3 & 4).

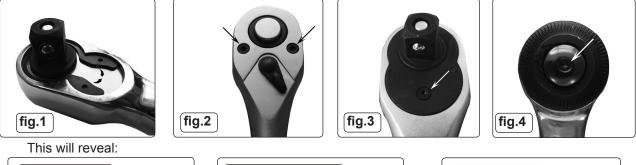

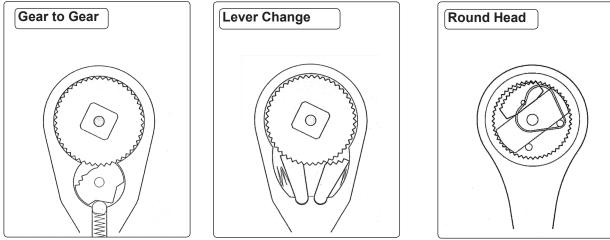

- •Remove original components, noting carefully the order in which they were removed.
- •Clean inside the ratchet head to remove any dirt or swarf and replace the components with the contents of the repair kit, ensuring that the original order is repeated.
- •Please note that the ratchet pawls in the Lever Change kit are marked 'L' and 'R' and should be replaced in the same position as the originals.
- •When rebuilding the Gear to Gear head, it may be useful to employ a pair of tweezers to hold the ball in place between the spring and pawl.
- •With all internal components in place apply a small amount of grease, close the head back up and resecure.

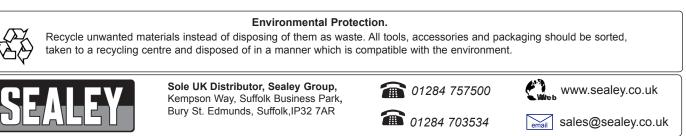

© Jack Sealey Limited

Original Language Version

RATCHET REPAIR KITS ISSUE:3(L) - 06/09/16