



31W & 26W COB LED RECHARGEABLE FLEXIBLE FLOODLIGHT, 3000LM

MODEL NO: LED18WFL.V3

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions

1. SAFETY

1.1. GENERAL SAFETY

- WARNING!** Risk of electric shock. **DO NOT** expose the product to water.
- Ensure the light is fully charged before initial use.
- DO NOT** turn the light on when it is being charged.
- DO NOT** shine directly into your, another person's or an animal's eyes.
- DO NOT** allow children to use the light.
- DO NOT** handle or move the light whilst it is being charged.
- DO NOT** use the light if you suspect that the battery or the light casing is damaged.
- DO NOT** leave battery in a discharged state, recharge battery immediately. Before storage, fully recharge the battery, subsequently recharge the battery at least once every three months of non-use.

1.2. BATTERY SAFETY

- WARNING!** To reduce the risk of burns or fire:
 - DO NOT** attempt to open, disassemble, modify or service the battery pack.
 - DO NOT** crush, puncture, short external contacts or dispose of in fire or water.
 - DO NOT** expose to temperatures above 60°C (140°F).
- Recycle or dispose of used battery as stipulated by local regulation.
- If the electrolyte in the cells gets on your skin, thoroughly wash with soap and water. If it gets in your eyes, rinse thoroughly with cool water and seek immediate medical attention.

2. INTRODUCTION

31W COB LED front light produces 2000 Lumen, and two side lights produce 1500 Lumens from 26W COB LEDs. Max. total output is 40W 3000 Lumen with all lights on. Main light can be rotated 180°, whilst the side lights can be positioned independently in any direction, to provide light precisely where required. Features three light modes. Main light can be operated separately from side lights, or all lights at the same time. 7.4V 4.4Ah Lithium battery charges via a USB Type-C charging port (USB cable supplied). Features magnetic base, large carry handle and is supplied with M6 screw adaptor to fit Sealey Telescopic Tripod, Model No. TRI01.


3. SPECIFICATION

Model No:.....	LED18WFL.V3
Battery:	7.4V Lithium-ion 4.4Ah
Charging Time:.....	6hr
Colour Temperature:	6500k
IP Rating:	IP44
LED Type:	31W & 26W COB LED
Lumen Output:	All/Side/Main: 3000/1500/2000lm
Nett Weight:	0.83kg
Operating Time:	All/Side/Main: 1/1.5/1.5hr

NOTE: the battery fitted to this lamp is considered to be a consumable item and its ability to accept a charge will reduce over time. We will provide warranty against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery regardless of whether it is less than one year old.



4. OPERATION

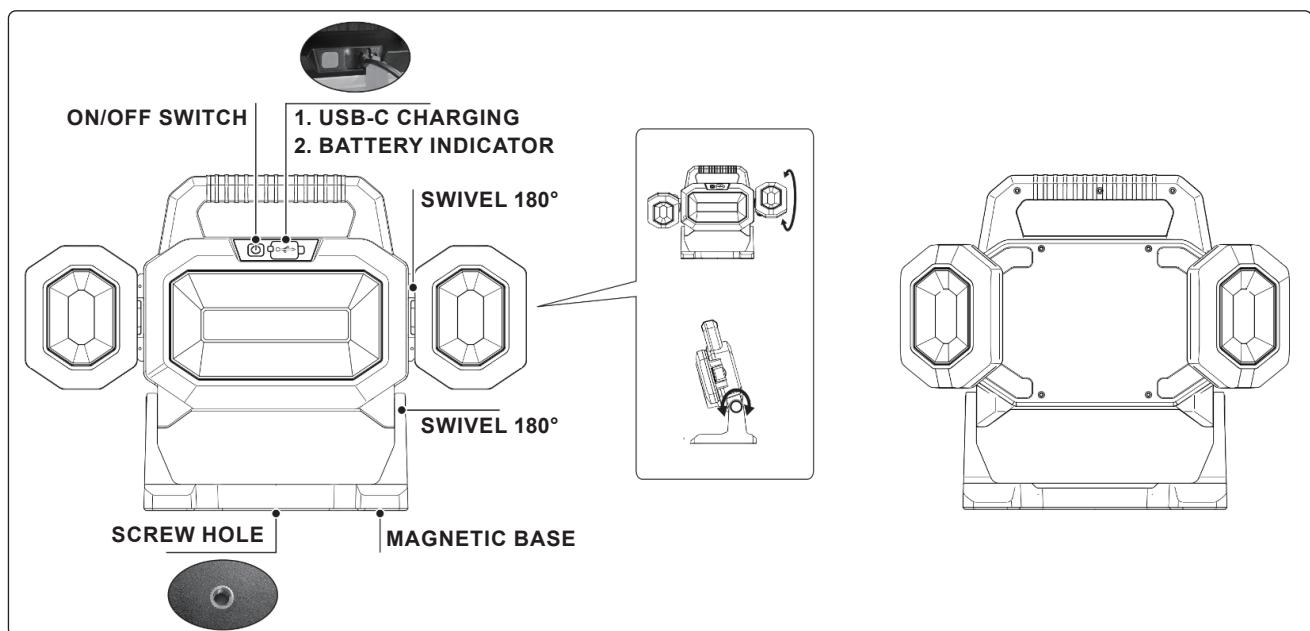

4.1. CHARGING

Before initial use, fully charge the unit. Turn the floodlight off before charging. Plug the supplied USB-C charge cable into the charging port. The charge indicator will illuminate red when charging, and green when fully charged. Unplug the charge cable from the power supply when the floodlight is fully charged.

4.2. OPERATING THE LIGHT

Turn floodlight on and off using the ON/OFF switch on the main body. The sequence of operation is as follows: (1) all three panels on, (2) two side panels on, (3) centre panel on, (4) OFF. Attach the floodlight to magnetic surfaces via the base, or attach to tripod (model no. TRI01) via the screw hole in the base. Tilt the floodlight as required.

5. MAINTENANCE

5.1. GENERAL

Maintenance is to be performed when necessary to maintain correct and safe performance. Before conducting any maintenance work, Turn off the product. All maintenance should be performed by an authorised service centre. Electrical repairs should ONLY be made by a qualified electrician. **DO NOT** use a faulty unit. Contact an authorised service centre for repair.

5.2. BATTERY MAINTENANCE

DO NOT allow the batteries to fully discharge before recharging. **DO NOT** leave batteries in a discharged state. Recharge batteries immediately. If the floodlight is not in use, recharge the batteries every three months.

5.3. CLEANING

Keep the unit free from dirt and grease. Turn off before cleaning. Regularly clean with a damp cloth, lukewarm water and mild detergent. **DO NOT** clean with abrasive materials or harsh chemicals. **DO NOT** spray water on the product, or allow water enter the battery compartment or internal components. **DO NOT** open enclosures to clean electrical parts.

5.4. STORAGE

Store the product in a cool, dry location. If the product is to be transported, place it in the original packaging. If the floodlight is not in use, recharge the batteries every three months.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



BATTERY REMOVAL

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk