

INSTRUCTIONS FOR

ALUMINIUM TORCH 5W XPG CREE LED ADJUSTABLE FOCUS 3 X C CELL MODEL NO: LED446

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Instructions

1. SAFETY

1.1. General

- **DO NOT** shine directly into your, another person's or an animal's eyes.
- **DO NOT** allow children to use the torch.
- * **DO NOT** use the torch if you suspect that the battery or the torch casing is damaged.
- **DO NOT** leave batteries in a discharged state. Before storage remove batteries and dispose of in the correct manor.

1.2. Battery Safety

- □ WARNING! To reduce the risk of burns or fire:
- **× DO NOT** attempt to open the batteries.
- * DO NOT crush, puncture, short contacts or dispose of in fire or water.
- DO NOT expose to temperatures above 60°C (140°).
- Replace only with the batteries designed for this product.
 - Recycle or dispose of used batteries as stipulated by local regulation.


If the electrolyte in the batteries gets on your skin, thoroughly wash with soap and water. If it gets in your eyes, rinse thoroughly with cool water and seek immediate medical attention.

2. INTRODUCTION

Single 5W XPG CREE LED produces extremely bright, white light with an output of 390lumens and a working range up to 200 metres. Focus type can be changed from spotlight to wide area by twist/slide action of the head. Lightweight aluminium housing. Two function on/off push button for full and 30% energy saving mode. Powered by 3xC batteries.(batteries not included)

3. SPECIFICATION

Model No:	LED446
LED:	5W XPG CREE
Lumen Out (high/low):	
Battery	
Working Range:	

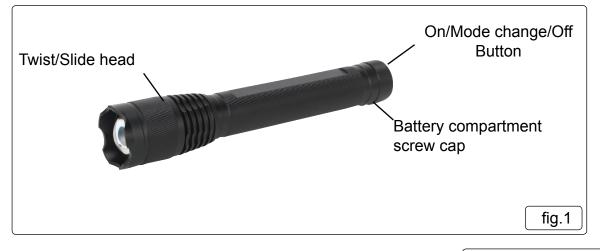

4. OPERATION

- 4.1. Remove Battery compartment screw cap.(fig.1)
- 4.2. Insert 3x C batteries into compartment (positive ends first) and replace cap.
- 4.3. To switch on press on/mode change/off button (base of torch), press again to change mode, press again to switch off.
- 4.4. Focus can be adjusted spotlight to wide angle by twisting head of torch.

5.

- 5.1. Keep the torch clean by wiping with a damp cloth.
- 5.2. Remove batteries if not being used for a long period of time.
- 5.3. Store torch and batteries in a dry childproof area.

Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.

WEEE Regulations

 
Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group. Kempson Way, Suffolk Business Park, Bury St. Edmunds, Suffolk. IP32 7AR





© Jack Sealey Limited

Original Language Version

LED446 | Issue 1 27/05/16