




# INSTRUCTIONS FOR: TRIANGLE DIRTBIKE STAND MODEL No: MS079.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.**

## 1. SAFETY INSTRUCTIONS

- X **DO NOT** sit on a motorcycle when it is on a stand.
- X **DO NOT** start a motorcycle on a stand.
- X **DO NOT** use the stand for a purpose it is not designed to perform.
- X **DO NOT** use the stand if it is damaged.
- X **DO NOT** make any modifications to the stand.
- X **DO NOT** mount the stand on tarmac/adam, as the surface may be unstable.
- ✓ Use only as a convenient but temporary stand.
- ✓ Maintain the stand in a good clean condition for the best and safest performance.
- ✓ Locate the stand and motorcycle in a suitable area.
- ✓ Ensure that the floor is not slippery, wear non-slip footwear.
- ✓ Keep children and unauthorised persons away from the parked area.
- ✓ When not in use, store in a safe, dry, childproof location.

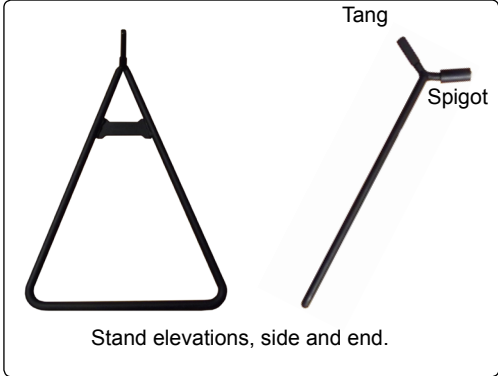


## 2. INTRODUCTION & SPECIFICATION

Quick and easy to use. Simply hook into the rear axle. Available to use for bikes with rear axle inner diameters of 11.5mm, 14.5mm and 18.5mm. When needing to move the bike, un-hook the stand off the axle and place onto the footpeg for future use.


### Specification.

Model No: .....**MS079.V2**  
 Axle Diameters: .....11.5mm, 14.5mm, 18.5mm  
 O/A Locating Pin Height.....380mm

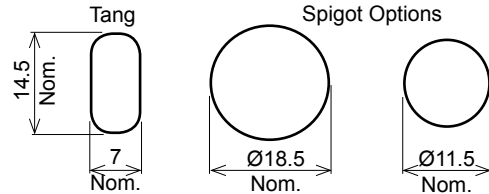

## 3. OPERATION INSTRUCTIONS

- 3.1. Select the best fit for axle from three options, tang or spigots. The spigot size can be changed utilising a cross head screwdriver.
- 3.2. Offer the stand spigot/tang into the rear axle fully and lean the motor cycle until the triangle base engages with the deck.
- 3.3. Continue to control and lean the motorcycle until the full load is supported.

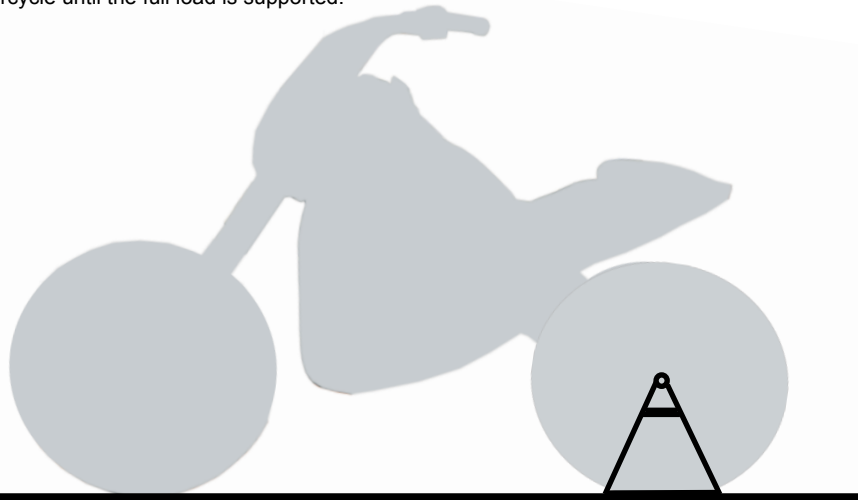

## 4. MAINTENANCE

- 4.1 Check visually the integrity of the welds.
- 4.2 Retain larger spigot and M5 machine screw, if removed.
- 4.3 Keep the stand clean and wipe off any oil or grease.
- 4.4 When the stand is not in use, store it in a safe, dry, childproof location.

**Environmental Protection.**  
 Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



**Sole UK Distributor, Sealey Group,**  
 Kempson Way, Suffolk Business Park,  
 Bury St. Edmunds, Suffolk,  
 IP32 7AR

01284 757500  
 01284 703534

[www.sealey.co.uk](http://www.sealey.co.uk)  
[sales@sealey.co.uk](mailto:sales@sealey.co.uk)