



TRUCK CABIN SHOCK ABSORBER SPRING COMPRESSOR

MODEL NO: **RE251**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear a face shield



Wear protective gloves



Warning! crushing of hands



DO NOT let coil windings touch

1. SAFETY

- WARNING!** Stop compressing the spring before the coil windings touch.
- WARNING! DO NOT** compress the spring to an extent where the jaws touch.
- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- WARNING!** Wear approved safety face shield (standard spectacles are not adequate).
- WARNING! DO NOT** use with power tools.
- WARNING! DO NOT** exceed 80Nm torque when using.
- WARNING!** Lubricate the compressor force screw with Molybdenum Disulphide grease before use.
- WARNING!** Ensure weight of cab is correctly, safely and securely supported before removal of spring and shock absorber. Refer to Owners Handbook for guidance.
- DO NOT** operate spring compressor if parts are damaged or missing as this may cause failure and/or personal injury.
- DO NOT** force the spring compressor to achieve a task it was not designed to perform.
- DO NOT** allow untrained persons to use the spring compressor.
- Familiarise yourself with the applications, limitations and potential hazards of the spring compressor.
- Maintain the spring compressor in good condition. Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- Keep the work area clean, uncluttered and ensure there is adequate lighting.
- Keep hands and body clear of the spring when operating the spring compressor.
- Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- Remove ill fitting clothes. Remove ties, watches, rings, other loose jewellery. Contain and/or tie back long hair.
- Wear appropriate protective clothing.
- When not in use clean and store the spring compressor in a safe, dry, childproof location.

2. INTRODUCTION

Allows removal and installation of the cabin spring shock absorber. Many applications including Volvo Trucks FM, FH 500P and 540P. Safety yokes are carefully shaped to stop the spring bowing while under compression. Not suitable for use with power tools. 1/2" Sq drive, do not exceed 80Nm torque. Always ensure the weight of the cab is correctly supported. Compatible with Sealey RE252 shock absorber wrench, for easy removal of the shock absorber top nut.

3. SPECIFICATION

Model No'sRE251
 Internal Diameter: Ø65mm
 External Diameter: Ø89mm
 Drive: 1/2" Sq.: **DO NOT** exceed 80Nm
 Nett Weight: 4.9kg



4. OPERATION

- ❑ **WARNING! DO NOT** compress the spring to an extent where the coil windings touch.
 - ❑ **WARNING! DO NOT** compress the spring to an extent where the jaws touch.
- 4.1. Ensure the jaws and the body of the compressor are correctly aligned at all times during spring compression.
- 4.1.1. Fully and securely engage spring cups to spring (fig.1).
- 4.1.2. Screw torque resister bar into upper spring cup carriage (fig.2).
- 4.1.3. Hold torque resister bar while using 1/2" Sq. drive ratchet to compress the spring (fig.2).
- 4.1.4. Remove upper and lower shock absorber fittings and carefully withdraw the spring and shock absorber as one unit. Use Sealey VS252 for the top mount fittings.
- 4.1.5. When separated from the cab, replace the defective component and refit to the vehicle in reverse order.

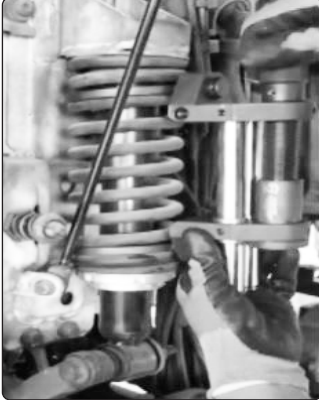


fig.1



fig.2

5. MAINTENANCE

- 5.1. Before each use check the compressor to ensure it is not damaged or worn.
- 5.2. If suspect, **DO NOT** use the unit, but contact your local Sealey stockist.
- 5.3. Grease the compressor spindle as necessary, at least every six months.
- 5.4. Keep the compressor clean, and when not in use store in a safe, dry, childproof location.

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk