



INSTRUCTIONS FOR: STEERING TUBE BEARING INSTALLER

Model No: **VS1831**

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- WARNING!** Always wear approved eye protection when using the press. Failure to do so may result in serious injury. *Normal spectacles are not adequate protection.*
- Familiarise yourself with the specific applications and limitations of the press, as well as any potential hazards.
- If unsure of the applications or limitations of the installer, contact your supplier.
- Ensure that the installer is the correct tool for the task. **DO NOT** use the installer for any purpose other than that for which it is designed.
- Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- Ensure that the workpiece is stable and that there is adequate lighting.
- Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- Ensure that the front of the motorcycle frame is adequately supported when the front wheel and forks are removed.
- DO NOT** use press if any parts are damaged or missing as this may cause failure and/or personal injury.
- DO NOT** use the press when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- Keep children and unauthorised persons away from the working area.
- When not in use, return parts to the case, and store in a safe, dry, childproof location.

2. INTRODUCTION

Safe and easy way to install lower steering bearing. Includes three aluminium dies and driver bar, to be used in conjunction with a soft-faced hammer.


Dies Ø: 31, 35, 43mm



3. OPERATION

Lower Bearing Insertion

Choose the correct size insert to fit the lower bearing, slide the driver over the steering tube and tap the bearing into place with a soft-faced hammer.

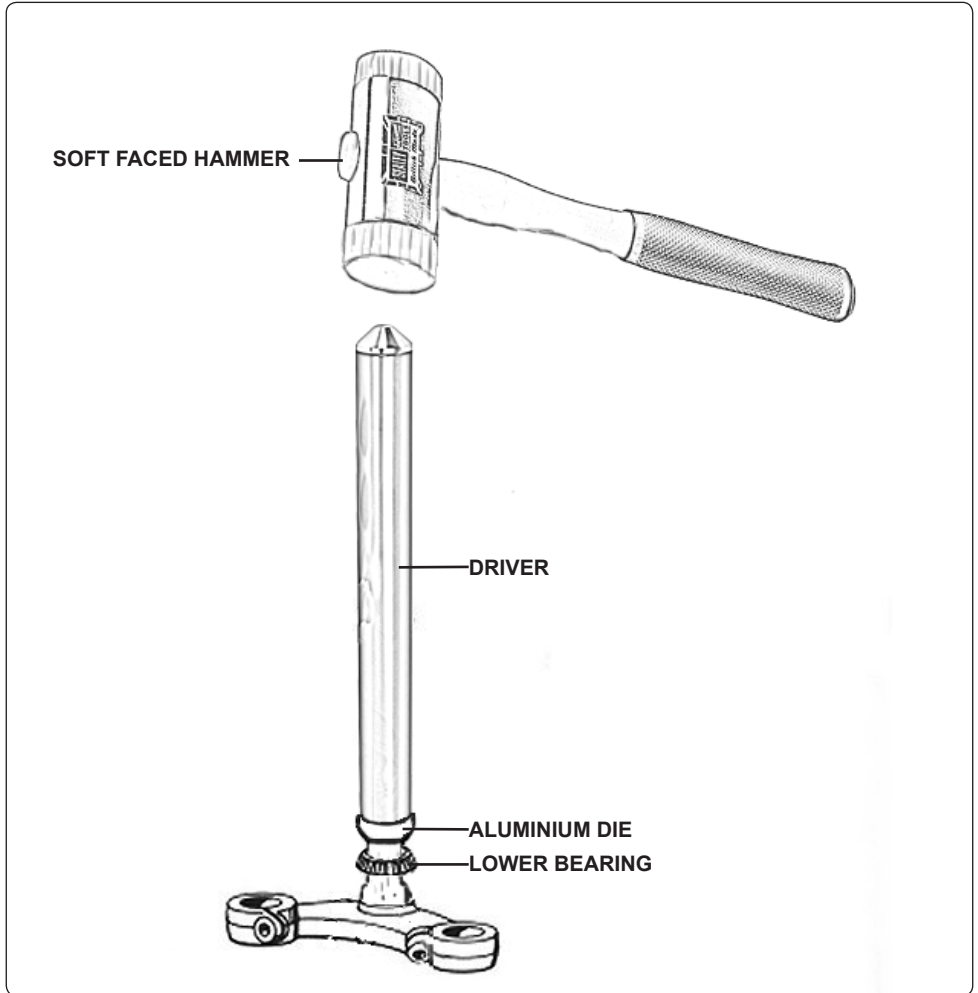

ALWAYS WEAR SAFETY GOGGLES WHEN USING DRIVERS

Users of drivers are reminded that damage to the striking faces can take place and we recommend that safety goggles are worn when using this tool.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk