

# CARBURETTOR SYNCHRONIZER (VACUUM, MINI-TYPE) MODEL NO: VS209.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



1. SAFETY

- Ensure that Health & Safety, local authority and general workshop practice regulations are strictly adhered to when using tools.
- ✓ Maintain the equipment in good and clean condition for best and safest performance. **DO NOT** use if damaged.
- ✓ Wear approved eye protection. A full range of personal safety equipment is available from your Sealey Stockist.
- \* **DO NOT** use the equipment for purposes other than for which it is designed.
- × DO NOT use the equipment when you are tired or under the influence of alcohol, drugs or intoxicating medicine.
- ✓ Wear suitable clothing to avoid snagging. **DO NOT** wear loose jewellery and tie back long hair.
- Account for all tools and parts being used and DO NOT leave them in, on or near the engine.
- Ensure that work area has adequate lighting.
- Keep children and unauthorised persons away from work area.
- $\checkmark$  When not in use, store the equipment in a safe, dry childproof area.
  - **IMPORTANT:** Refer to the vehicle manufacturer's service instructions, or a proprietary manual, to establish the correct procedure and data. These instructions are provided as a guide only.

**IMPORTANT:** Ensure the vehicle has been serviced and that the air screw and pilot screw have been correctly adjusted.

- **WARNING!** Exhaust fumes are dangerous, ensure steps are taken to remove fumes from work area.
- □ WARNING! It is assumed that anybody using the VS209.V2 will have some knowledge of the mechanics of the vehicle, particularly in regard to safe handling of fuel systems and removal of the fuel tank. If there is any doubt refer the job to a professional mechanic.

## 2. INTRODUCTION

One of the most comprehensive balancer sets available on the market. Features a bank of four mini-gauges with lockable valves enabling user to hold vacuum values in use. Supplied with set of long and short carburettor adaptors for easy access amongst the tubes and wires around the carburettor. Includes four 900mm delivery tubes. Supplied in carry-case.

#### 3. SPECIFICATION

| Model No:    | VS209  |
|--------------|--------|
| Nett Weight: | 1.09Kg |

#### 4. SET-UP

- 4.1. Start the vehicle and run until it will operate without choke. When this has been achieved, turn off the engine and fit the vacuum gauges as follows:
- 4.2. Remove the inlet manifold vacuum screw(s). Select the appropriate extension connector and screw into the inlet manifold of vehicle, **DO NOT** overtighten, finger pressure is adequate.
  4.2. Denote the summing and until the fourth of the fourth of the second screw into the inlet manifold of vehicle, **DO NOT** overtighten, finger pressure is adequate.
- 4.3. Repeat for the remaining carburettors (up to four).
- 4.4. Push fit the rubber hose to each extension connector ensuring a good fit so no air will leak.
- 4.5. Push fit the other end of the hose to the gauges ensuring a good fit so no air will leak.


#### 5. OPERATION

- 5.1. Close the lockable valves (fig.1) and start the engine.
- 5.2. Open each regulator gradually by turning the lockable valves (fig.1) until the display needle stabilises.
- 5.3. Refer to the vehicle handbook for slide adjustments to the carburettors. Following the vehicle handbook, make the adjustments to each carburettor until all the display readings are the same.
- 5.4. Advance the throttle a few times and allow the engine to settle back to tickover. You can close the lockable valves to hold vacuum values in use. Re-check the display readings and confirm they are still reading the same values. If not re-adjust the carburettors as necessary.
- 5.5. When synchronization is complete, switch off engine and remove extension connectors from the manifold. Replace the vacuum screw(s) back into the inlet manifold.



## 6. CONTENTS

- VACUUM GAUGE 1 VS209.V2-01
- 2 VS209.V2-02 FIXED PLATE
- 3 VS209.V2-03 RUBBER HOSE 8x5x900mm EXTENSION CONNECTOR (M5x0.8x169) 4 VS209.V2-04
- 5 VS209.V2-05 EXTENSION CONNECTOR (M6x1.0x60)
- 6 VS209.V2-06 EXTENSION CONNECTOR (M6x0.75x53)
- 7 VS209.V2-07 EXTENSION CONNECTOR (M5x0.8x53) 8
- VS209.V2-08 9 VS209.V2-09

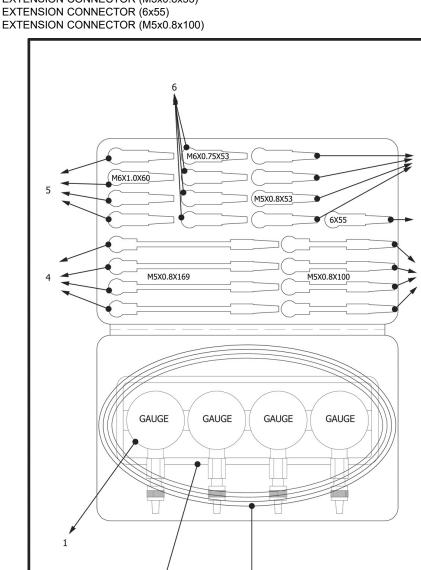

## **ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

3

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

2

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR 01284 757500 01284 703534 Reales@sealey.co.uk www.sealey.co.uk

7

8

9