



Item	Part No.	Description
1	EH15001.01	COVER FOR GRILLE
2	EH15001.02	BACK GRILLE
3	EH15001.03	MOTOR
4	EH15001.04	MOTOR FAN
5	EH15001.05	THERMOSTAT/SENSOR CLIP
6	EH15001.06	HEATING ELEMENT SUPPORT
7	EH15001.07	TIME-DELAY THERMOSTAT
8	EH15001.08	THERMAL CUT-OUT
9	EH15001.09	HANDLE
10	EH15001.10	CONTROL BOX
--	EH15001.10A	CONTROL BOX (LOGO SIDE) (NOT SHOWN)
11	EH15001.11	SOCKET
12	EH15001.12	SWITCH KNOB
13	EH15001.13	SWITCH RING
14	EH15001.14	THERMOSTAT KNOB
15	EH15001.15	SWITCH
16	EH15001.16	THERMOSTAT 15A AC400V

Item	Part No.	Description
17	EH15001.17	CONTROL BOX COVER
18	EH15001.18	HEATING ELEMENT
19	EH15001.19	HEATING ELEMENT SUPPORT
20	EH15001.20	INNER CASING
21	EH15001.21	CONNECT PLATE
22	EH15001.22	WHEEL, FIXED (196x19x37x174)
23	EH15001.23	WHEEL AXLE
24	EH15001.24	FOOT SUPPORT
25	EH15001.25	OUTER CASING
26	EH15001.26	FRONT GRILLE
27	EH15001.27	COVER FOR BACK GRILLE
28	EH15001.28	INSULATION RING
29	EH15001.29	HANDLE GRIP
--	EH15001.30	FAN CLAMP (NOT SHOWN)
--	EH15001.31	PROTECTIVE RING (NOT SHOWN)
--	EH15001.32	FIXED BRACKET (NOT SHOWN)
--	EH15001.FK	FIXING KIT (NOT SHOWN)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.