


09311 – SIP Fireball 74XRDT Infrared Diesel/Paraffin Heater

Exploded Diagram & Parts List

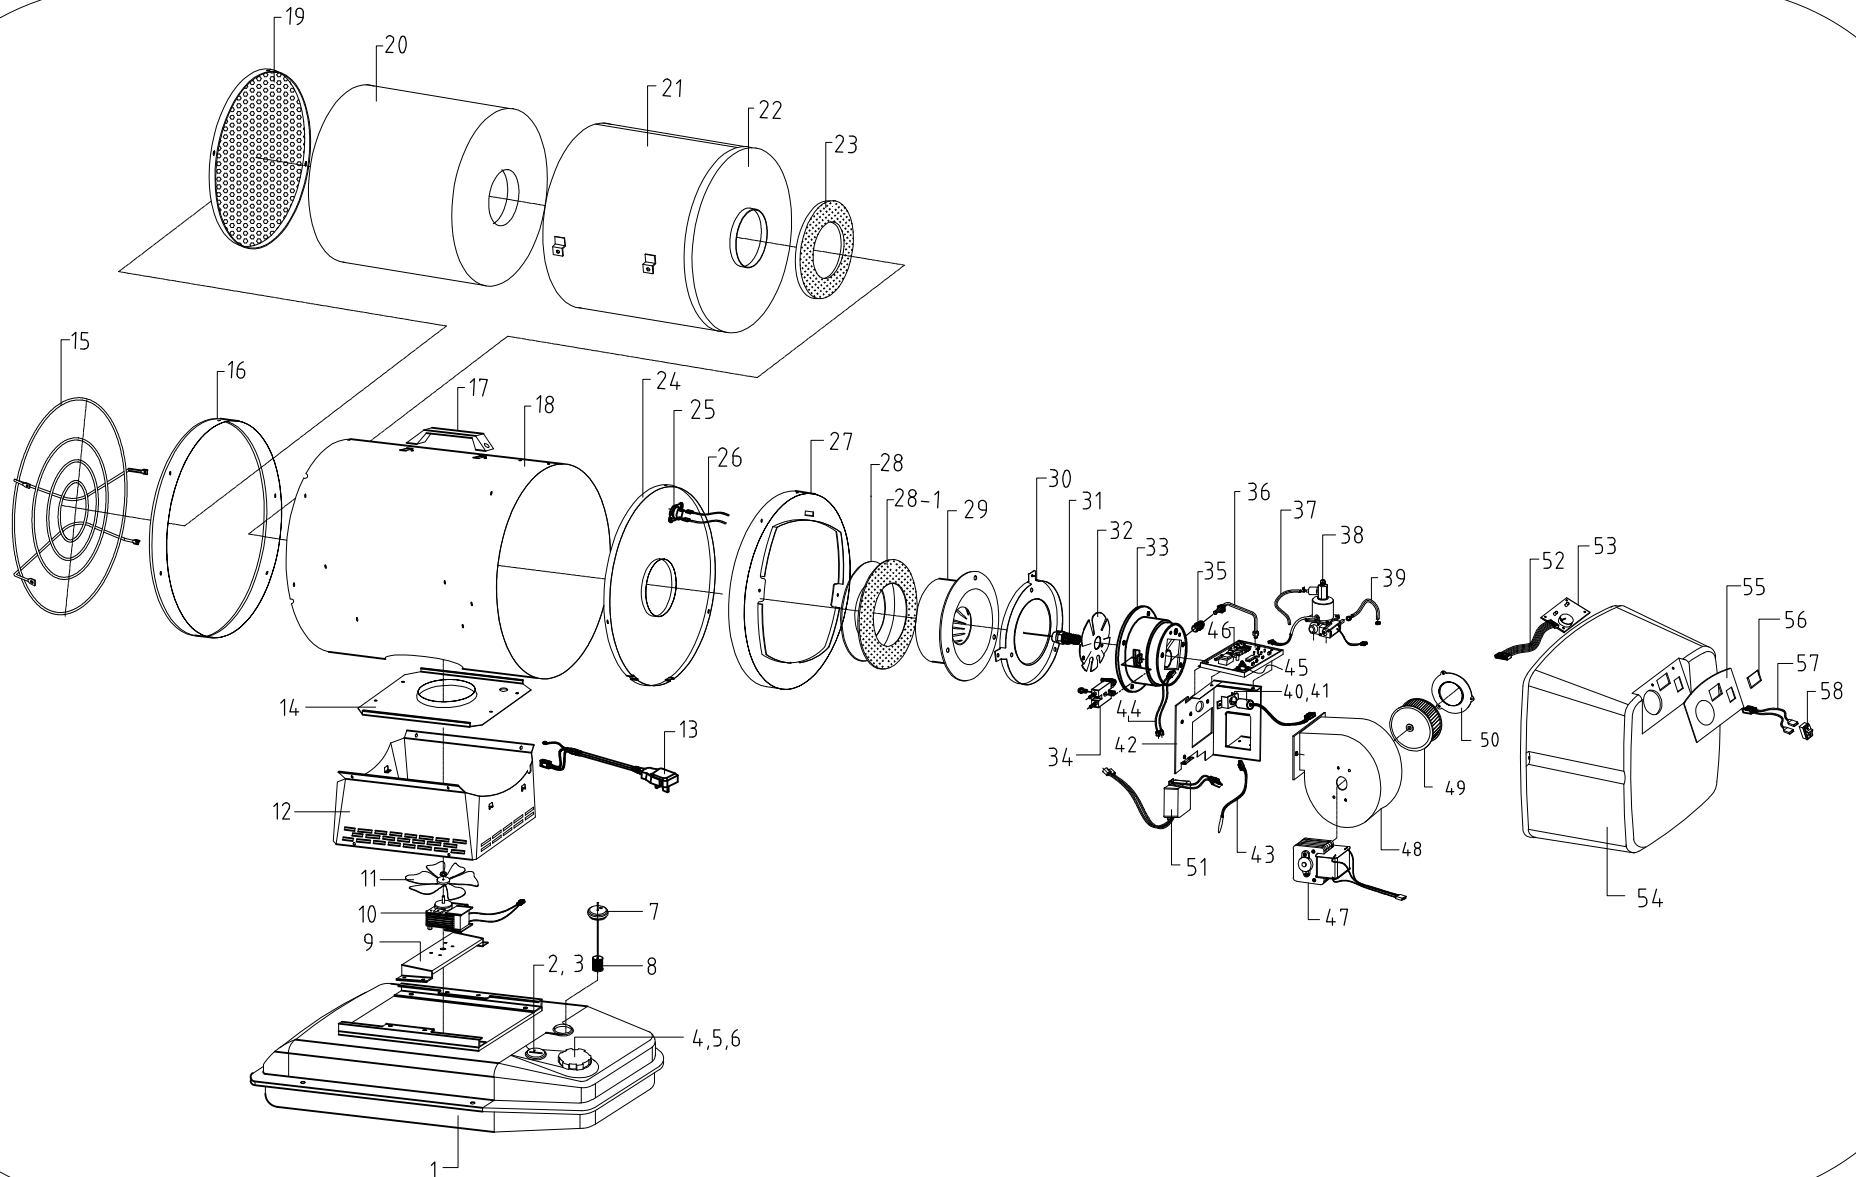



09311 – SIP Fireball 74XRDT Infrared Diesel/Paraffin Heater Exploded Diagram & Parts List

Ref. No.	Description	SIP Part No.	Ref. No.	Description	SIP Part No.
1.	Fuel Tank	PW09-00450	30.	Insulator Plate	PW09-00474
2.	Fuel Gauge	PW09-00451	31.	Nozzle	PW09-00475
3.	Fuel Gauge Seal		32.	Burner Head Blade	PW09-00476
4.	Fuel Cap	PW09-00260	33.	Burner Head	PW09-00477
5.	Fuel Cap Seal (outer)		34.	Electrode	PW09-00478
5-1.	Fuel Cap Seal (inner)		35.	Nipple	PW09-00286
6.	Fuel Filter	PW09-00251	36.	Electronic Pump Pipe	PW09-00479
7.	Pumping Filter Seal	PW09-00452	37.	PVC Return Hose	PW09-00480
8.	Pumping Filter	PW09-00453	38.	Electric Pump	PW09-00481
9.	Cooling Motor Base	PW09-00454	39.	Fuel Hose	PW09-00482
10.	Cooling Motor	PW09-00455	40.	Photocell	PW09-00295
11.	Cooling Fan	PW09-00456	41.	Photocell Bracket	PW09-00296
12.	Support	PW09-00457	42.	Control Base	PW09-00483
13.	Mains Lead	PW09-00458	43.	Thermistor	PW09-00484
14.	Air Outlet Plate	PW09-00459	44.	Tilt Switch Wire	PW09-00311
15.	Front Guard	PW09-00460	45.	Tilt Switch	PW09-00310
16.	Cover Ring	PW09-00461	46.	PCB	PW09-00485
17.	Handle	PW09-00462	47.	Blower Motor	PW09-00486
18.	Main Cover	PW09-00463	48.	Blower Casing	PW09-00487
19.	Heating Plate	PW09-00464	49.	Blower Fan	PW09-00488
20.	Insulator	PW09-00465	50.	Inlet	PW09-00489
21.	Inner Body	PW09-00466	51.	Igniter	PW09-00490
22.	Inner Body Cover	PW09-00467	52.	Sub PCB Wire	PW09-00491
23.	Inner Body Gasket	PW09-00502	53.	Sub PCB	PW09-00492
24.	Air Guard	PW09-00469	54.	Rear Cover	PW09-00493
25.	Thermostat	PW09-00298	55.	Label	PW09-00494
26.	Thermostat Wire	PW09-00470	56.	Display Window	PW09-00495
27.	Rear Plate	PW09-00471	57.	Main Switch Cable	PW09-00496
28.	Burner Gasket-A Small ø146mm	PW09-00503	58.	On/Off Switch	PW09-00497
28-1.	Burner Gasket-B Large ø165mm	PW09-00504	59.	Stand	PW09-00498
29.	Diffuser	PW09-00473	NA.	NA	NA