



AIR OPERATED OIL DISPENSING PUMP STATION

MODEL NO: **AK4560D.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear eye
protection



Wear protective
gloves



Wear safety
footwear



Wear protective
clothing

1. SAFETY

- ☐ **WARNING!** Ensure health & safety, local authority, and general workshop practice regulations are strictly adhered to when using this equipment.
- ✓ Familiarise yourself with product application and limitations, as well as the specific potential hazards peculiar to this product.
- ✓ Maintain the pump station in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Non authorised parts will invalidate the warranty.
- ✓ Use only to pump lubricants up to SAE 150 viscosity.
- ✓ Ensure safety eye protection, oil resistant gloves and protective clothing are worn when using this product.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non slip shoes.
- ✓ Keep children and unauthorised persons away from the working area.
- ✓ After use, drain any fluids from the equipment before storage.
- ✓ Dispose of waste liquids in accordance with local authority regulations.
- ✓ Disconnect air pressure from equipment when not in use.
- ✗ **DO NOT** exceed the maximum air pressure of 115psi.
- ✗ **DO NOT** point the nozzle at people or animals.
- ✗ **DO NOT** use the equipment near open flames.
- ✗ **DO NOT** smoke whilst using this equipment.
- ✗ **DO NOT** use to extract corrosive fluids.
- ✗ **DO NOT** dismantle, tamper with or adapt the pump for any purpose other than for which it is designed.
- ✗ **DO NOT** use the unit if it has been dropped or mishandled, check the unit to ensure there is no damage.
- ✓ Keep the pump clean and store in a safe dry, childproof location.
- ☐ **WARNING! DO NOT** allow uncontrolled discharge of fluids thus polluting the environment. All liquids must be disposed of according to local authority regulations.

2. INTRODUCTION

Air operated 3:1 double acting pump for barrels or tanks with 2"BSP fittings. Pump is supplied with air management system and connected to a 940mm rigid suction probe with non-return valve. Features hose for attachment to digital oil meter (Model No. AK4565D supplied) or to optional retractable hose reel (Model No. AK4567D). Suitable for use with engine, hydraulic, synthetic, gear and transmission oils up to SAE150.

3. SPECIFICATION

Model No:AK4560D.V2
Maximum Air Pressure: 115psi
Maximum Flow Rate: 12L/min
Maximum Output Pressure: 350psi
Maximum Viscosity: SAE150
Outlet Size: 1/2"BSP
Pump Ratio: 3:1
Recommended Air Pressure: 70psi
Digital Hose End Meter
Model:AK4565D
Accuracy: +/- 0.5%
Inlet: 1/2"BSP
Battery: Lithium CR2 3V 1400mAH

fig.1



4. ASSEMBLY

4.1. PUMP AND AIR REGULATOR/LUBRICATOR ASSEMBLY

- 4.1.1. Apply a small amount of liquid thread sealant onto the threads of the air inlet of the pump and attach the air regulator/lubricator (fig.2).

WARNING! DO NOT allow thread sealant to enter the pump.


- 4.1.2. Attach the outlet pipe to the male outlet thread on the pump and attach the male threaded end of the pipe to the Digital Hose End Meter.

- 4.1.3. Attach the nozzle valve pipe assembly to the outlet of the Digital Hose End Meter.

WARNING! DO NOT overtighten the swivel connections.


- 4.1.4. Slide the locking nut, locking ring and the barrel nut onto the pick up probe of the pump (fig.3), screw the locking nut onto the barrel nut to lock the assembly to the pick up probe.

- 4.1.5. Insert the pump assembly into the support brackets on the trolley and hang the meter onto the accessory support bracket.

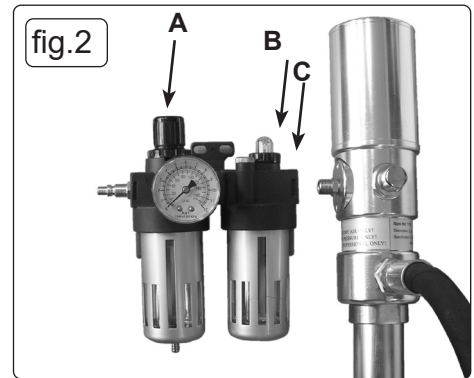

4.2. PRE-OPERATION

- 4.2.1. Lift up the knob (fig.2A) on the air regulator and ensure that it is wound fully anti-clockwise.
- 4.2.2. Remove the filler plug (fig.2B) from the lubricator and fill the lubricator with a quality air tool oil (Sealey ATO1000S), refit the filler plug.
- 4.2.3. The lubricator feed is set when the unit is running, adjust the feed knob (fig.2C) the drip rate can be seen through the sight glass of the dome. The rate of oil feed will automatically increase or decrease inline with the air flow.

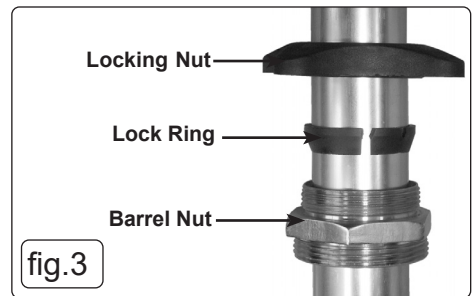

5. OPERATION


5.1. INSTALLING THE PUMP

- 5.1.1. Remove the bung from the 2" BSP opening of the drum.
- 5.1.2. Slacken off the locking nut on the pump probe and insert the pump into the drum until the probe bottoms out, tighten the barrel nut and then tighten the locking nut to fix the pump to the drum.

5.2. SETTING UP THE PUMP

- 5.2.1. Ensure that the air regulator valve is fully wound anti-clockwise and then connect the air supply onto the quick release connector on the air regulator.
- Lift the knob on the regulator and slowly turn clockwise until the recommended operating pressure of 70psi is reached, push down on the regulator knob to lock the position.

NOTE: Check the system for leaks, should an air leak be discovered, release the pressure, disconnect the air line and repair/replace the joint or seal before continuing.

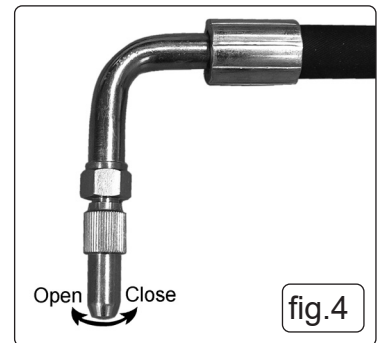

5.3. OPERATING THE GUN


WARNING! Ensure that the trigger is not depressed before opening the nozzle valve.

- 5.3.1. Press the Reset button for 1 sec to zero the display.
- 5.3.2. With the nozzle pointing into the receiving container, open the nozzle valve as shown in fig.4.
- 5.3.3. Depress the trigger and dispense the liquid the amount dispensed is shown on the display (fig.5.4).
- 5.3.4. Release trigger and close the nozzle valve.

5.4. LCD INTERFACE USAGE

- 5.4.1. User Buttons (fig.5)

1. LCD displays delivery volume and totals
2. Units: L, GAL, PT, QT
3. Two decimal place values
4. Low battery indicator
5. MOVE and RESET buttons

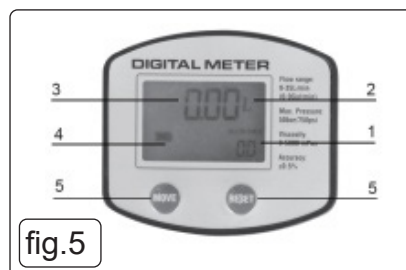

- 5.4.2. Display key (fig.6)

1. Volume since last RESET
2. Battery state
3. Calibration mode indicator
4. Reset to zero indicator
5. Total register
6. Flow rate mode
7. Units (Lts/gall/pint/quart)

- 5.4.3. MOVE / RESET Usage (fig.5.5)

MOVE key enters 'calibration' mode

RESET key for register and total



Both keys pressed enters 'configuration' mode

- 5.4.4. To RESET current total (fig.7)

From standby press RESET

All segments light up

Current total resets to 0.00

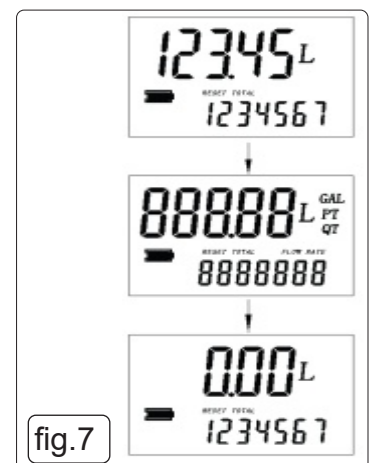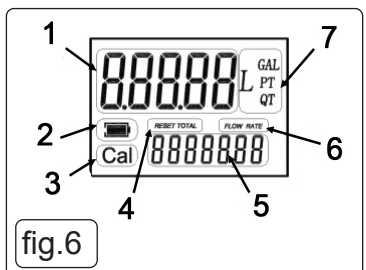

- 5.4.5. To display correction factor and Total (fig.8)

Hold MOVE and RESET for 3 seconds
Value "1.4000" is correction factor.

"1234567" overall total

- 5.4.6. To change Units (fig.9)

Hold MOVE and RESET for several seconds

Area 2 in fig.5 shows units

Press RESET to change units

Press and hold MOVE to confirm choice

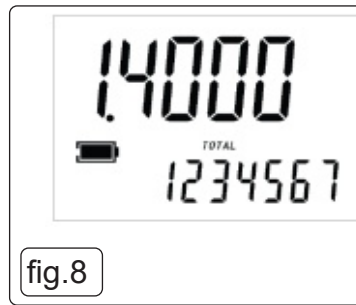


fig.8

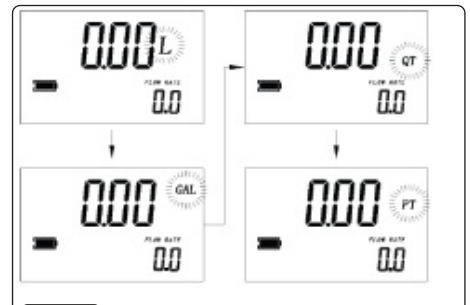


fig.9

5.5. DETERMINING THE CORRECTION FACTOR

Dispense at least 1 litre of liquid into a calibrated container.

- 5.5.1. Record the quantity of liquid in the container and record the quantity of liquid dispensed as indicated on the meter display. Press the Move + Reset buttons (fig.5.5 and fig.5.5) simultaneously to display the current correction factor.

Qty Dispensed
Qty Indicated x **Current Correction Factor** = **New Correction Factor**.

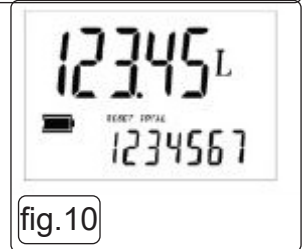


fig.10

5.6. ALTERING CORRECTION FACTOR DIRECTLY

- 5.6.1. Wait for meter to go to standby (fig.7).

- 5.6.2. Reset total (5.2.4) fig.8 to zero.

- 5.6.3. Press and hold MOVE key until all digits illuminate and display shows 'Cal' (fig.9).

- 5.6.4. Press RESET to set digit values (from right to left) (fig.10).

- 5.6.5. Once value is correct hold down MOVE key until Cal mode quits.

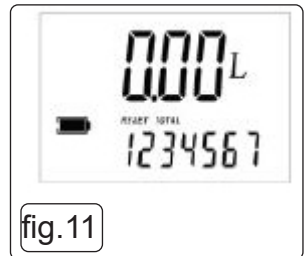


fig.11

5.7. ALTERING CORRECTION FACTOR INDIRECTLY

- 5.7.1. Wait for meter to go to standby (fig.10).

- 5.7.2. Reset the total (5.4.4) fig.11 to zero.

- 5.7.3. Dispense into measuring container (minimum 5 litres) and record.

- 5.7.4. If displayed value does not match actual measured value press and hold MOVE key until each digit reads as per the measured value. Press MOVE key to visit each digit in turn.

- 5.7.5. Once value is correct (i.e. matches measured value) press and hold MOVE key until Cal mode quits (fig.11).

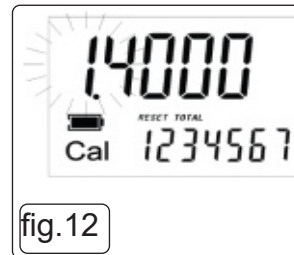


fig.12

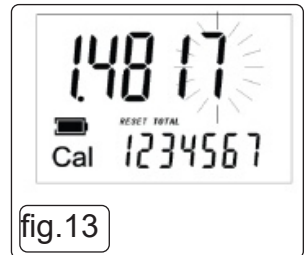


fig.13

6. MAINTENANCE

6.1. CHANGING THE DIGITAL METER BATTERY

- 6.1.1. Remove the rubber protective cover from the meter.

- 6.1.2. Remove the screw and cover from the side of the meter.

- 6.1.3. Remove and replace battery (fig.14).

- 6.1.4. Replace cover and secure with screw.

- 6.1.5. Replace the protective rubber cover.

NOTE: If the LCD display does not activate, remove the meter, press button 1 (fig.5.5) to reboot the meter.

- 6.2. Before every use visually check the supply hose for damage and check all joints for leaks, any damaged component must be replaced or leaks repaired before using.

- 6.3. Check the nozzle valve for leaks, if it does not seal, replace before using.

- 6.4. Drain air regulator water trap daily.

- 6.5. Top up lubricator as required, using a quality air tool oil.

- 6.6. To change the silencer, remove the circlip (fig.15) and remove the old silencer, place a new silencer into the recess and refit the circlip.

NOTE: For any other maintenance and repairs the unit should be returned to your Sealey stockist.



fig.14

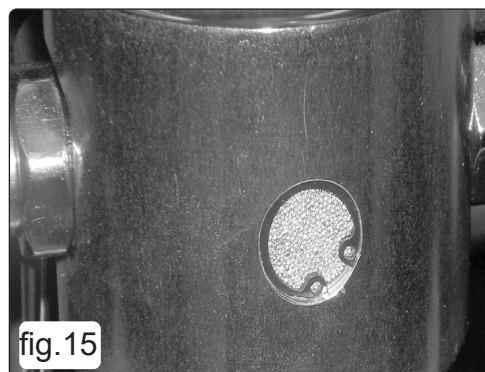


fig.15



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



BATTERY REMOVAL SEE SECTION 6

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk