



[UK-DoP-h07/0004](#)



The SFWH Safety Fast Hangers are designed to support timber joists, beams and trussed rafters from masonry walls without the need for masonry above the top flange.

## FEATURES

### Benefits



- Requires no masonry above the top flange to achieve the published performance values.
- Improved vertical and lateral load distribution.
- Mini Strap simply hooks onto the hanger.
- Enables the construction of the floor deck prior to the next lift of masonry.
- Reduces Health & Safety risks associated with the use of traditional masonry hangers with no masonry above.
- Eliminates the need for propping of floor joists.
- Mini Strap provides lateral restraint capacity in accordance with NHBC guidelines.
- Allows for retrofit of lateral restraint straps.

### Material



- SFWH/SFWHI: Hot-dip galvanised mild steel
- Mini Strap: Pre-galvanised mild steel

## TECHNICAL DATA

### Product Dimensions

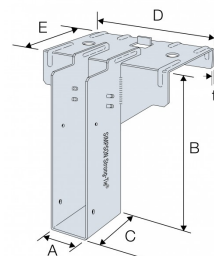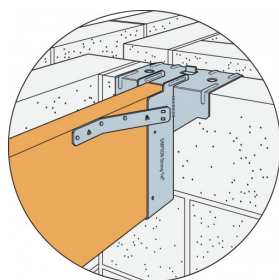

References	Joist Size [mm]		Product Dimensions [mm]						Joist holes		Mini Strap holes
	Width	Height	A	B	C	D	E	t	Ø6x4 Oblong [mm]	Ø4.1 [mm]	Ø4.2 [mm]
SFWH225/38/100	35	225	38	215	75	200	103	2.5	2	2	3
SFWH225/40/100	38	225	40	215	75	200	103	2.5	2	2	3
SFWH250/40/100	38	250	40	240	75	200	103	2.5	2	2	3
SFWH150/50/100	47	150	50	140	75	200	103	2.5	2	2	3
SFWH175/50/100	47	175	50	165	75	200	103	2.5	2	2	3
SFWH200/50/100	47	200	50	190	75	200	103	2.5	2	2	3
SFWH225/50/100	47	225	50	215	75	200	103	2.5	2	2	3
SFWH250/50/100	47	250	50	240	75	200	103	2.5	2	2	3
SFWH225/75/100	72	225	75	215	75	200	103	2.5	2	2	3
SFWH225/100/100	97	225	100	215	75	200	103	2.5	2	2	3

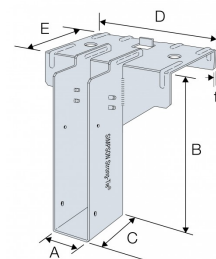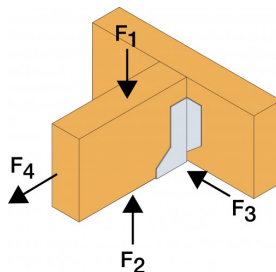**Product capacities - Timber to masonry**


References	Number of Fasteners				Characteristic Capacities [kN]		Safe Working Loads [kN]		
	Joist		Mini Strap		R <sub>1,k</sub>		R <sub>1,SWL</sub>		
	Qty	Type	Qty	Type	3.5N/mm <sup>2</sup> Solid LAC	7N/mm <sup>2</sup> Solid DAC	3.5N/mm <sup>2</sup> Solid AAC	2.8N/mm <sup>2</sup> Solid LAC	7N/mm <sup>2</sup> Solid DAC
SFWH225/38/100	2	N3.75x30	3	N3.75x30	18.6	18.6	9.3	7.4	9.3
SFWH225/40/100	2	N3.75x30	3	N3.75x30	18.6	18.6	9.3	7.4	9.3
SFWH250/40/100	2	N3.75x30	3	N3.75x30	18.6	18.6	9.3	7.4	9.3
SFWH150/50/100	2	N3.75x30	3	N3.75x30	18.6	18.6	9.3	7.4	9.3
SFWH175/50/100	2	N3.75x30	3	N3.75x30	18.6	18.6	9.3	7.4	9.3
SFWH200/50/100	2	N3.75x30	3	N3.75x30	18.6	18.6	9.3	7.4	9.3
SFWH225/50/100	2	N3.75x30	3	N3.75x30	18.6	18.6	9.3	7.4	9.3
SFWH250/50/100	2	N3.75x30	3	N3.75x30	18.6	18.6	9.3	7.4	9.3
SFWH225/75/100	2	N3.75x30	3	N3.75x30	28.9	28.9	14.5	11.6	14.5
SFWH225/100/100	2	N3.75x30	3	N3.75x30	28.9	28.9	14.5	11.6	14.5

## INSTALLATION

### Installation

Use all specified nails.

- Build masonry to required level, ensuring any coursing bricks or blocks are at least one course below the supporting block, and leave to cure.
- Place the Safety Fast Restraint Hanger over the inner leaf of block work, ensuring the bearing plate is fully located onto the top of the masonry, sitting tight against the front face and top of the block work.
- Sit the floor joist into the masonry hanger and ensure all joists are correctly installed. The joist should be tight into the back of the hanger where possible. The maximum gap between the back of the hanger and the end of the joist is 6mm. Use specified nails.
- Clip the Safety Fast Mini Strap onto the restraining hooks on either side of the hanger and nail to the side face of the joist with 3.75 x 30mm square twist nails. **INSTALL ONLY ONE STRAP PER HANGER.**

### General Installation Notes

- The floor decking may be stored on the joists provided the load is uniformly distributed between the several joists and does not exceed the hanger or joist capacities. Refer to joist manufacturer or supplier for joist capacity and maximum construction loads.
- The floor decking must be securely attached to each joist before additional loads can be placed on the system.
- Floor decking and block work is to be cut where necessary to fit around the upstand stiffeners.
- Pallets of blocks or other construction materials should be placed onto the scaffolding and NOT directly onto the floor.
- The materials can then be evenly distributed around the floor manually, ensuring hanger or joist capacities are not exceeded.